

# ***SUBAL austria***

## **INSTRUCTION MANUAL for STROBECASE SN-58/II**

---

### **INSERTING THE CANON SPEEDLITE 580EX II**

Slide the 580EX II into the hot shoe of the STROBECASE lid and tighten the fixing-screw.

Check the O-ring. O-rings should be absolutely clean and lightly greased. We recommend the use of waterproof Silicone grease. Too much grease results in the accumulation of small dirt particles which can be hard to see. The O-ring groove and the sealing surfaces must be absolutely clean.

Slide the lid with the strobe on into the housing taking care for the index pin and locating hole, push the lid fully into the housing and lock the latches. Ensure that the locking spring of the latches clicks properly into the small cutaway on the main part of the latch.

When opening, please take note of the following hints:

After you have unlocked the latches, lift the lid slowly and carefully to avoid water drips onto the flash. It is recommended to rinse the housing with fresh water and dry up before opening.

### **CABLE**

A SUBAL six contacts S6-TTLcable is provided, requires an S6 socket on the housing.

### **OPERATING**

Strobecase SN-58/II with the CANON SPEEDLITE 580EX II works directly with the camera via the S6-TTL cable. The maximum range is reduced to approximately 1/2 of the above water values.

Because the flash underwater is usually in a sideways position, the flash orientation is difficult to position correctly, the zoom reflector should therefore always be set on the maximum coverage angle. Please watch, when setting the flash unit, that the reflector is always in the horizontal position.

Recommended accessory: Aiming Lite with adjustable bracket.